

[1] Setting output and data readback is float data,
[2] PSU CV Mode and PSU CC Mode will automatically after output enabled